

ICF-1180I Series

Industrial PROFIBUS-to-fiber converters



- > Fiber cable test function validates fiber communication
- > Auto baudrate detection and data speed up to 12 Mbps
- > PROFIBUS bus fail prevents corrupted datagram in functioning segment
- > Fiber inverse feature
- > Alarm by relay output
- > 2 KV galvanic isolation protection
- > Dual power inputs for redundancy (Reverse power protection)
- > Extends PROFIBUS transmission distance up to 45 km
- > Wide temperature model available for -40 to 75°C environments



Overview

The ICF-1180I series industrial PROFIBUS-to-fiber converters are used to convert PROFIBUS signals from copper to optical fiber. The converters are used to extend serial transmission up to 4 km (multi-mode fiber) or up to 45 km (single-mode fiber). The ICF-1180I

provides 2 KV isolation protection for the PROFIBUS system and dual power inputs to ensure that your PROFIBUS device will perform uninterrupted.


Fiber Cable Test Function

Fiber-optic cables are usually deployed for long distance communication. To ensure proper communication across the fiber-optic cables, engineers use fiber sensors. With fiber cable test function through DIP switch adjustments, the ICF-1180I series converters

eliminate the need to rely on fiber-optic sensors. This function not only detects fiber communication abnormalities but also validates the format of the received packet. It can also determine which side (Tx or Rx) is causing the problem.

PROFIBUS Fail Safe

When the PROFIBUS device malfunctions or the serial interface fails, it will generate electrical noise, resulting in bus failure. Traditional media converters will let the noise signal pass through the fiber and on to the other converter. This will disrupt data transmissions between the two buses and eventually communication ceases across the entire system. When this occurs, the engineer will not be able to easily locate the failed device because the entire PROFIBUS network is down. To avoid this situation, the ICF-1180I was designed to detect and recognize noise signals. If the bus fails on one side, the noise signal will not propagate through the ICF-1180I and affect additional bus segments. In addition, the ICF-1180I will also trigger an alarm notification to the field engineer on the location of the failure.

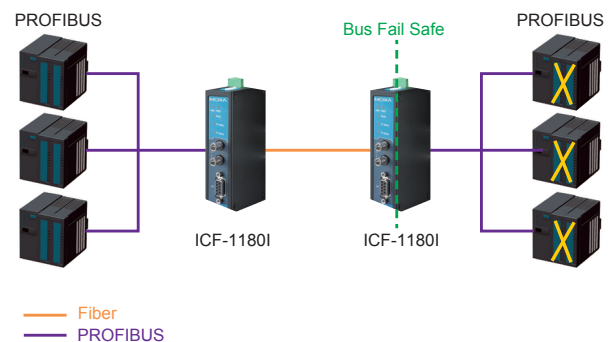

Auto/Manual Baudrate Settings

The ICF-1180I series simply convert the signal back and forth between PROFIBUS and fiber. The ICF-1180I series work under baudrates between 9.6 Kbps to 12 Mbps. Engineers do not need to know the baudrate of the connected PROFIBUS device; the ICF-1180I series

can automatically detect the baudrate of the PROFIBUS device and apply this baudrate directly. This is an extremely convenient feature. If necessary, baudrates can be set to a fixed value via DIP switches.

Fiber Inverse Function

The ICF-1180I provides a fiber inverse function to choose fiber optic light ON or light OFF when sending logic signal '1'. For default setting, fiber optic is light OFF when sending logic signal '1'; in Fiber Inverse mode, fiber optic is light ON when sending logic signal '1'. This

feature provides greater compatibility when the ICF-1180I converter is integrated with PROFIBUS converters of other manufacturers. Please refer to third-party user manuals when using this feature.

Fiber Link Monitor

The ICF-1180I series converters provide fiber link monitor function to detect the communication errors on either the fiber side or PROFIBUS

side. Once there is an error in communication, the corresponding LED will turn red, and the relay alarm will activate.

Specifications

Technology

Standards:

IEC 61158-2 for PROFIBUS DP

Interface

P1 Port: ST optical fiber

P2 Port: PROFIBUS DP (DB9 female)

Relay Alarm: One relay output with current carrying capacity of 2 A @ 30 VDC (Normal open)

LED Indicators: PWR1, PWR2, Ready, P1 Status, P2 Status

DIP Switches:

DIP 1 to 4: Baudrate setting

DIP 5: Fiber link monitor

DIP 6: Fiber inverse function

DIP 7: Reserved

DIP 8: Fiber cable test function

PROFIBUS Communication

Data Rate: 9.6, 19.2, 45.45, 93.75, 187.5, 500, 1500, 3000, 6000, and 12000 Kbps

Auto Baudrate: Yes

Isolation Protection: 2 KV

Optical Fiber Side

Point-to-Point Transmission:

	Multi-mode	Single-mode
Wavelength	820 nm	1310 nm
Tx Output	-14 dBm	-7 dBm
Rx Sensitivity	-28 dBm	-29 dBm
Link Budget	14 dBm	21 dBm
Typical Distance	4 km	45 km

Physical Characteristics

Housing: Metal

Mounting: DIN-Rail mounting, wall mounting (with optional kit)

Dimensions: 30.3 x 115 x 70 mm (1.19 x 4.53 x 2.76 in)

Weight: 180 g

Environmental Limits

Operating Temperature:

Standard Models: 0 to 60°C (32 to 140°F)

Wide Temp. Models: -40 to 75°C (-40 to 167°F)

Storage Temperature: -40 to 75°C (-40 to 167°F)

Ambient Relative Humidity: 5 to 95% (non-condensing)

Power Requirements

Input Voltage: 12 to 48 VDC

Connector: Terminal Block

Power Line Protection: Level 3 (2 KV) Surge Protection

Over Current Protection: 1.1 A

Standards and Certifications

Safety: UL 508, EN 60950-1

EMC: CE, FCC Part 15 Subpart B Class A

EMI: EN 55022, Class A; EN 55024

EMS:

EN 61000-4-2 (ESD) Level 3,

EN 61000-4-3 (RS) Level 3,

EN 61000-4-4 (EFT) Level 3,

EN 61000-4-5 (Power Surge) Level 3,

EN 61000-4-5 (Communication Surge) Level 3,

EN 61000-4-6 (CS) Level 3

Freefall: IEC 60068-2-32

Green Product: RoHS, CRoHS, WEEE


Warranty

Warranty Period: 5 years

Details: See www.moxa.com/warranty


Dimensions and Pin Assignment

Unit: mm (inch)

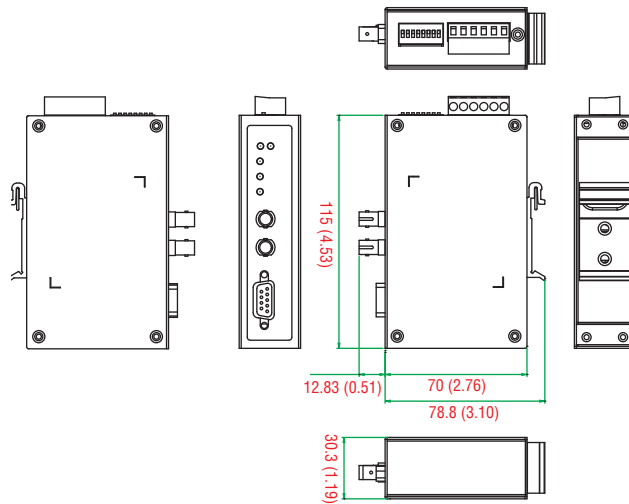

Pin Assignment

PROFIBUS Connector (DB9 Female)

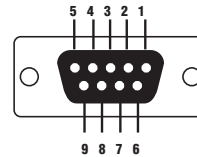

PIN	Signal Name
1	N-C
2	N-C
3	Profibus D+
4	RTS
5	Signal common
6	5 V
7	N-C
8	Profibus D-
9	N-C

Ordering Information

Available Models

- ICF-1180I-M-ST:** PROFIBUS to fiber converter, multi-mode, ST connector, 0 to 60°C
- ICF-1180I-S-ST:** PROFIBUS to fiber converter, single-mode, ST connector, 0 to 60°C
- ICF-1180I-M-ST-T:** PROFIBUS to fiber converter, multi-mode, ST connector, -40 to 75°C
- ICF-1180I-S-ST-T:** PROFIBUS to fiber converter, single-mode, ST connector, -40 to 75°C

Package Checklist

- ICF-1180I series PROFIBUS-to-fiber converter
- Hardware installation guide (printed)
- Warranty card

Tento produkt můžete zakoupit u společnosti AutoCont IPC a.s.



AutoCont IPC a.s.

Váš dodavatel průmyslových počítačů, komponent a speciálních průmyslových IT systémů.

 Uhlířská 1064/3, 710 00 Ostrava, Česká republika

 obchod@autocont-ipc.cz

 +420 552 301 002

 www.autocont-ipc.cz



PRŮMYSLOVÉ POČÍTAČE

fanless embedded PC, do racku, ...



POČÍTAČE S DISPLEJEM

panelové PC, terminály, do vozidel, ...



AUTOMATIZACE A SBĚR DAT

převodníky, karty, moduly, switche, ...



PERIFERIE A KOMPONENTY

monitory, klávesnice, desky, skříně, ...



NOTEBOOKY A TABLETY

odolné, windows, android, IP65, ...



INFORMAČNÍ KIOSKY

interiérové, venkovní, ...



MEDICÍNSKÁ TECHNIKA

počítače, tablety, LCD, klávesnice, ...



SOFTWAREVÁ ŘEŠENÍ

pro výrobu, zaměstnance, kiosky, ...



PŘEJÍT DO E-SHOPU

eshop.autocont-ipc.cz



DOPRAVA ZDARMA

Doprava zdarma v ČR a SR při objednávce nad 10 000 Kč bez DPH nebo nad 400 EUR.



PRODLOUŽENÁ ZÁRUKA

Záruka 2 roky na vyráběné počítače s možností jejího prodloužení až na 5 let.



ODMĚNA ZA VĚRNOST

Pravidelní zákazníci u nás nakupují za nižší ceny. Výše slevy se odvíjí od realizovaného obrátu.



SERVIS ON-SITE A IN-TIME

K projektovým dodávkám nabízíme rozšířenou podporu a servis s garancí výměny zařízení do 48 hodin.